



# OTC Phoenix Kit for safe lock Infosheet

La Gard 39e

More than just locks. Find out why.



## Discover more about the features and benefits of OTC Phoenix Kit for Safe Lock in this infosheet

- Features & benefits.....4
- Top reasons to install OTC Phoenix Safe Kit.....7

BVK's OTC Phoenix Safe Kit enhances the functionality of Kaba's La Gard 39e safe lock.

The Kit cost effectively converts this lock that uses static passwords into a smart and secure OTC lock


Once the Kit has been installed, the lock is unlocked with a secure One Time Code (OTC).

Centralised, real-time management of access schedules and users eliminates inefficient manual processes.

Installed in more than 10,000 ATMs, and used in live locations for more than 5 years, BVK's OTC Phoenix Safe Kit is proven to successfully improve security and efficiency without the need for an expensive lock replacement.

# The OTC Phoenix Safe Kit consists of the following solution elements

---

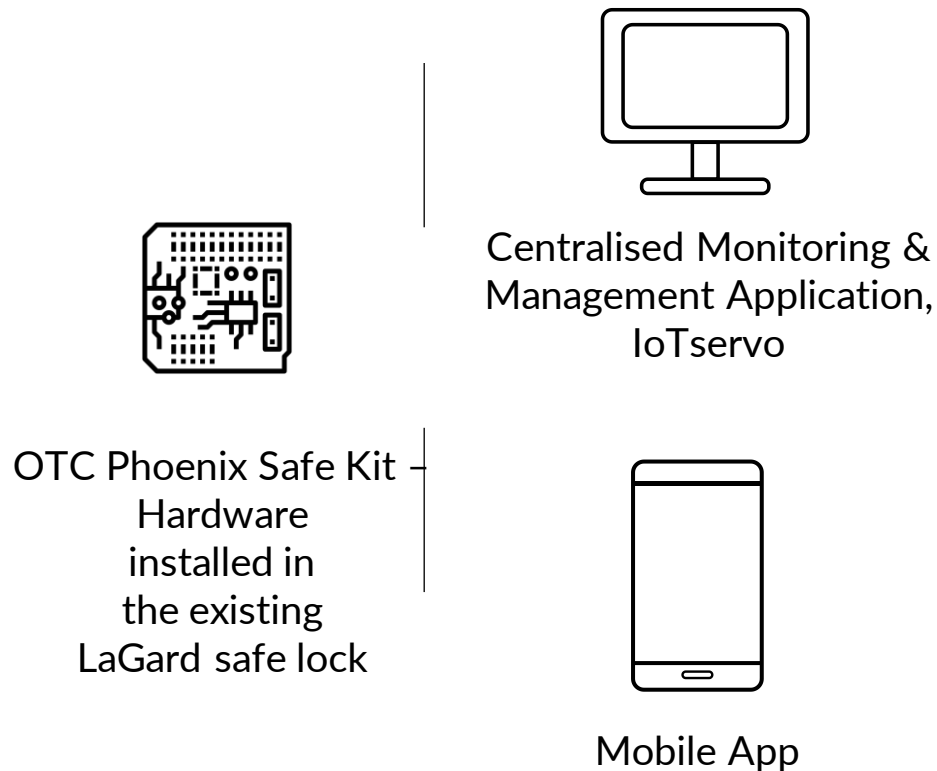

## Centralised Monitoring & Management Application

Users, locks and schedules are centrally managed via the remote management application, IoTservo.

## Mobile App

With the Phoenix Safe Kit, the La Gard safe sock only opens if the user credentials and schedule have been validated.

If everything is correct, the user can request the One Time Code (OTC).

The OTC is automatically generated by the central application and is entered manually by the user via the integrated keypad.

# Features & Benefits

## Cost effective lock conversion to secure OTC access

---

The security of the La Gard safe lock is improved and efficiency increased by simply installing the OTC Phoenix Safe Kit. There is no need to replace the existing lock.

## No static passwords or physical keys

---

The OTC Phoenix Safe Kit means that One-Time-Codes (OTCs) are used to open the La Gard safe lock. The inefficiencies, costs and security risks of handling and managing static passwords and physical keys are eliminated.

## Defends against unauthorised openings

---

Once the Phoenix Safe Kit has been installed, the La Gard lock only unlocks when the schedule, lock and user credentials have been validated. If one of these parameters is not valid, the lock will not unlock.

## Fast & simple installation

---

The OTC Phoenix Safe Kit can be installed on-site in less than 15 minutes.

## No battery power required

---

The advantage of the OTC Phoenix Safe Kit is that there is no need for the user to insert a 9V battery every time the safe is opened. With the OTC Phoenix Safe Kit, the lock uses a USB power supply from the ATM.

## Optional event monitoring

---

A software agent can be installed on the ATM and used online for the real-time centralised monitoring system, IoTservo.

Alternatively, the agent can be used off-line to log all the open and close events on the ATM for manual retrieval.

## User-friendly Mobile App for OTC access

The OTC is sent to the Mobile App. Each authorised user is registered in the system with their individual mobile phone IMEI and PIN.

Mobile phone user access can instantly be added or removed remotely using the centralised Management Application.

The Mobile App includes an OTC wallet which holds the OTCs ready for use when there is no data connection available.





## Centralised scheduling & remote management

Lock access schedules for CIT and service personnel are created and approved centrally. An access schedule is created for each user or group of users which defines the access hours and days, according to their permissions. In some circumstances, access for a user can be instantly removed, even if access has been pre-approved for that user.

## Third party secure access to scheduling and management system

If required, shared access partners can be granted access to all or part of the management application, according to their permissions. This results in cost savings and improved efficiency. When there is a change of partner or partner's personnel, there is no time-consuming need for 'vendor meets' to manually 'shelve' a lock on-site.


## Top reasons to install OTC Phoenix Safe Kit for La Gard 39e

1. Cost effectively converts an old fashioned La Gard lock that uses static passwords into a smart and secure OTC lock
2. No need to replace the original lock
3. No battery power required to unlock the lock
4. User-friendly access. OTC can be received via the Mobile App and entered into the La Gard keypad
5. Remote management of users and locks
6. Proven. Installed successfully in more than 10,000 ATMs



# BVK Key-less lock solutions

All managed and controlled by BVK's centralised management application, IoTservo

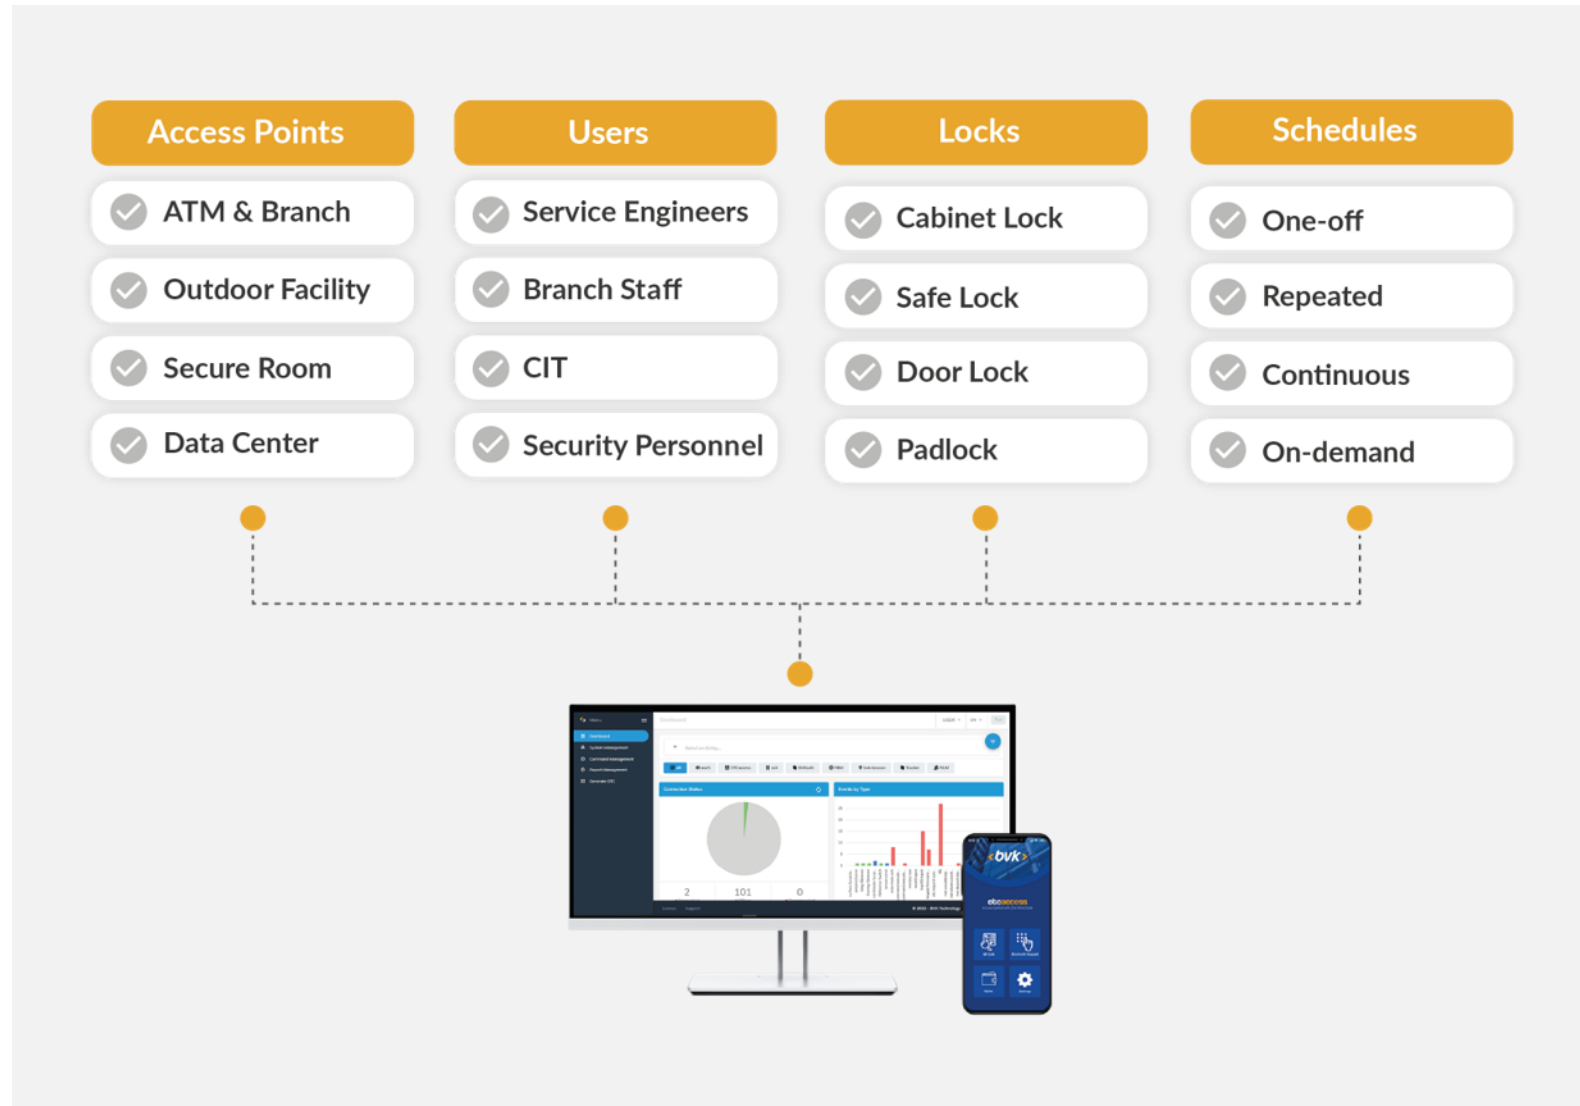



[www.bvktechnology.com](http://www.bvktechnology.com)

